



Hybrid Inverter(RCD) Communication Port			
BAT-COM	COM(R485)	DRM-COM(R485)	WIFI-COM(RS485)
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68
69	70	71	72
73	74	75	76
77	78	79	80
81	82	83	84
85	86	87	88
89	90	91	92
93	94	95	96
97	98	99	100

- Note:
- 1)Use for the countrys of Europe(Not Use for Australia) ;
 - 2)Cross section of the Cable please refer to the chapter 6.3 for more details in User Manual.
 - 3)RCD,Breaker selection guide refer to User Manual , and must comply with local regulations.
 - 4) Battery, PV, and the other electrical wiring refer to User Manual and "SIH-5&6&8&10KW-TH electrical wiring diagram for 3Phase Grid".
 - 5) Maximum number of parallel machines is 3;
 - 6)When the number of parallel machines is 2,the waterproof network cable splitter can be not used.

设计	TQ	修改日期	